

HYPERPRO

LOWERING KIT / VERLAGINGSSET


for

KAWASAKI ZX-12R Models '02>

LK-KA12-002-30 PART LIST

PR121920 - Pull rod/ trekstang	2
-	-
-	-
-	-

ALL IDEAS, DESIGNS, ARRANGEMENTS AND PLANS INDICATED OR REPRESENTED BY THIS DRAWING ARE OWNED BY HYPERPRO AND WERE CREATED, EVOLVED AND DEVELOPED FOR USE ON AND IN CONNECTION WITH THE SPECIFIC PROJECT. NONE SUCH IDEAS, DESIGNS, ARRANGEMENTS OR PLANS SHALL BE USED BY OR DISCLOSED TO ANY PERSON, FIRM OR CORPORATION FOR ANY PURPOSE WHATSOEVER WITHOUT THE WRITTEN PERMISSION OF HYPERPRO.

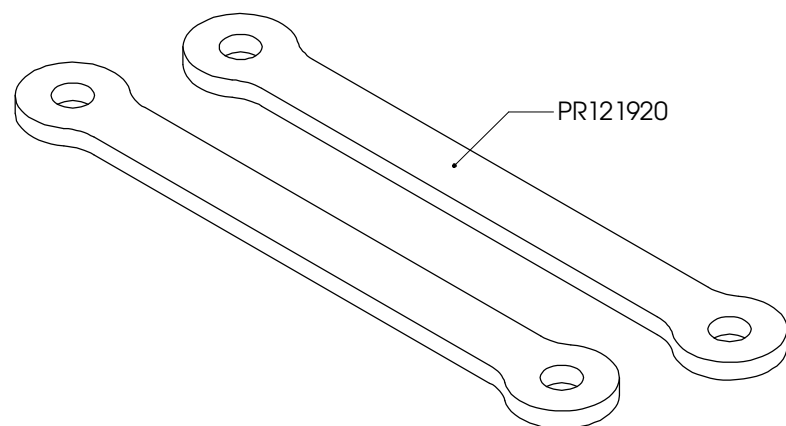

Inbouw handleiding

Meet de lengte van de originele link. Van hart tot hart moet deze 187mm zijn, bij 181mm is een andere set benodigd (LK-KA12-001-35)

VOORZIJDE

De veervoorspanning minimaal zetten (tegen de klok in draaien). De luchtkamer reduceren als de vork wil doorslaan.

ACHTERZIJDE

Verminder de originele veervoorspanning met 5mm (tegen de klok in draaien). Vervang de originele trekstangen door de HYPERPRO trekstangen. Het achterwiel eerst belasten voordat de link vastgezet word.

LET OP! DE LENGTE VAN DE ZIJSTANDAARD MOET 15-20mm INGEKORT WORDEN.
AFTERMARKET SPATBORDEN KUNNEN NIET TOEGEPAST WORDEN.

Instruction manual

Measure the length of the original link. From centre to centre this should be 187mm, if it's 181mm an other kit is used (LK-KA12-001-35)


FRONT

Turn the preload adjuster to minimum preload (ounter clockwise). Reduce the air chamber if the fork hits the end of its stroke.

REAR

Reduce the spring preload by 5mm (turn counter clockwise). Replace the original pull rods with the HYPERPRO pull rods. Put some pressure on the rear wheel before tightening the link.

WARNING! SHORTEN THE SIDE-STAND 15-20mm.
AFTERMARKET REAR MUDGUARDS CAN NO LONGER BE USED.

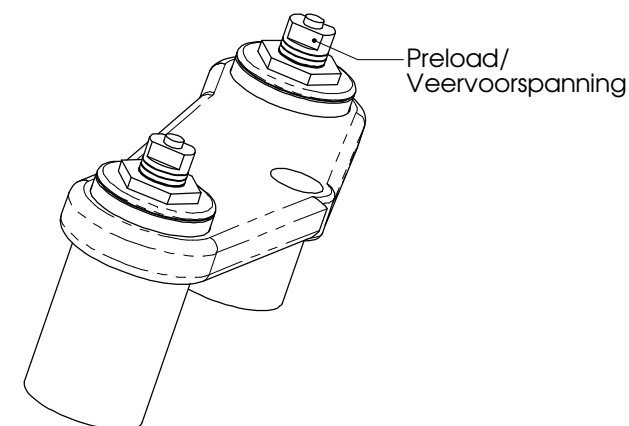

See WWW.HYPERPRO.COM for more info about our products.