

YOSHIMURA

RESEARCH&DEVELOPMENT OF AMERICA, INC.

5420 DANIELS STREET STE A, CHINO CA., 91786 · (800)634-9166 · (909)628-4722 · FACSIMILE (909)591-2198

www.yoshimura-rd.com

RS-3 OVAL PERFORMANCE EXHAUST SYSTEM

KAWASAKI '98-02 ZX-6R 2005-2008 ZZR600

ZX64950	SS RACE BOLT- ON SYSTEM		
ZX649502	CF RACE BOLT- ON SYSTEM		
ZX64950-TI	TI RACE BOLT- ON SYSTEM		





Caution: Exhaust system can be extremely hot. Let motorcycle cool down before beginning installation.

Note: Read through all instructions before beginning installation.

Tools Needed:

12mm and 14mm sockets 3/8" ratchet 17mm wrench Torque wrench

Installation Steps:

- 1 Remove stock muffler and muffler gasket. (See Fig.1 for fastener locations.)
- 2 Install new muffler gasket. (Not supplied - Kawasaki part no. 11060-1813)
- 3 Install Yoshimura muffler using supplied bolts. (See Fig.2) Torque bolts to 2.3 kg-m (16.5 lb-ft).
- 4 Remove the steel insert from rubber grommet on muffler hanger bracket and replace with supplied aluminum spacer. (See Fig. 3)
- 5 Apply heat insulator to the inside of muffler clamp then slide clamp onto muffler.
 (Note direction of clamp in Fig. 3)
- 6 Mount clamp to the outside stock muffler bracket using supplied bolt and nut. (see Fig. 2&3)
 Torque bolt to 2.5 kg-m (18 lb-ft).
- 7 Before starting motorcycle, check for proper clearance between new muffler and motorcycle. (i.e. swing-arm, passenger foot-peg, rear wheel, etc.) If any problem is found, please carefully follow through the installation steps again. If problem still persists, please call Yoshimura tech. Dept. at (800)634-9166 / in CA (909)628-4722

Note: After starting motorcycle, it is normal for new exhaust system to smoke until oil residue burns off.

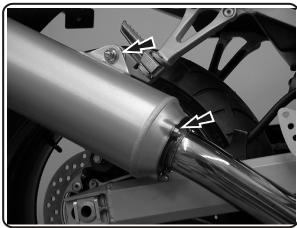


Fig. 1

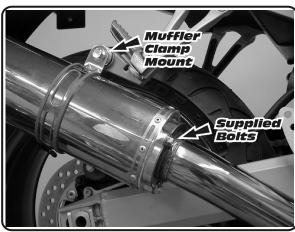


Fig. 2


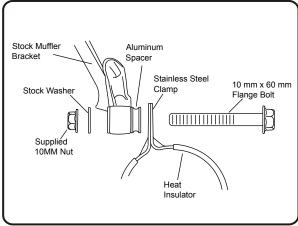


Fig. 3

Part List: Page 3

#ZX64950(2, TI)

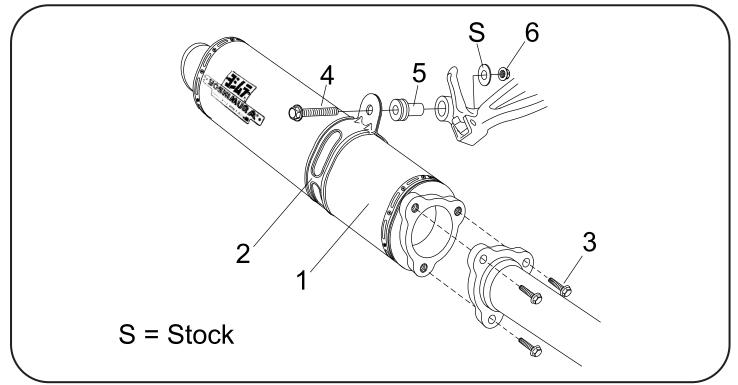

Parts Diagram

NO.	DESCRIPTION	QTY	PART #
1	RS-3 Oval Muffler Assembly	1	**
2	Stainless Steel Muffler Clamp	1	
	Stainless Steel or Titanium Sleeve uses		COS450S10ALX
	Carbon Fiber Sleeve uses		COS450S10AL
3	20mm Flange Head Bolt	3	M8X20H
4	60mm Flange Head Bolt	1	M10x60H
5	Aluminum Spacer	1	10X32X25SP
6	Flange Nut	1	10MMFNUT
**	Muffler Clamp Heat Insulator	1	HT SHLDTRS
**	Low Volume Sound Insert	1	RS3-INS-K
**	Yoshimura Vinyl Sticker	1	17029

Nuts and Bolts Guide (Actual Size):

